


Calibration about RM19E


1. Download CH341SER

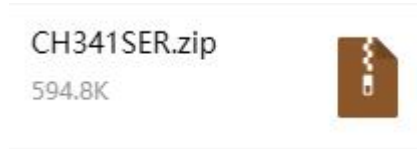


2. Download software "calibration_RM19E and open "calibration.exe"



3. Open the serial port at the serial port setting interface

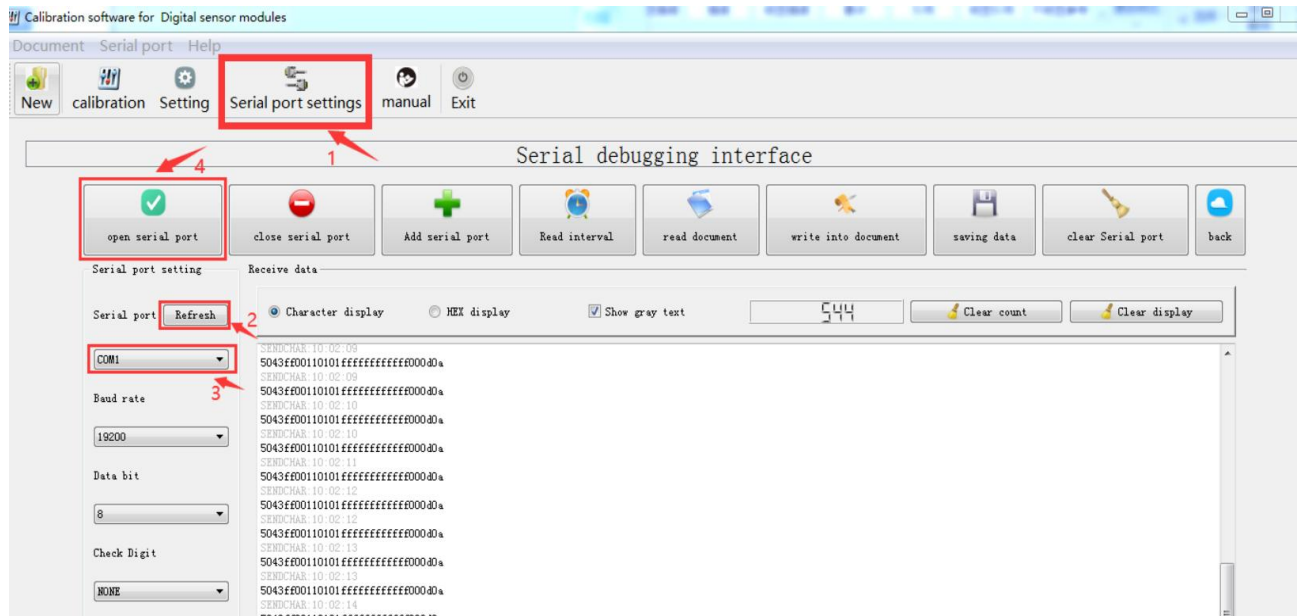

4. Setting parameters, checksum setting and ID setting: 12345678

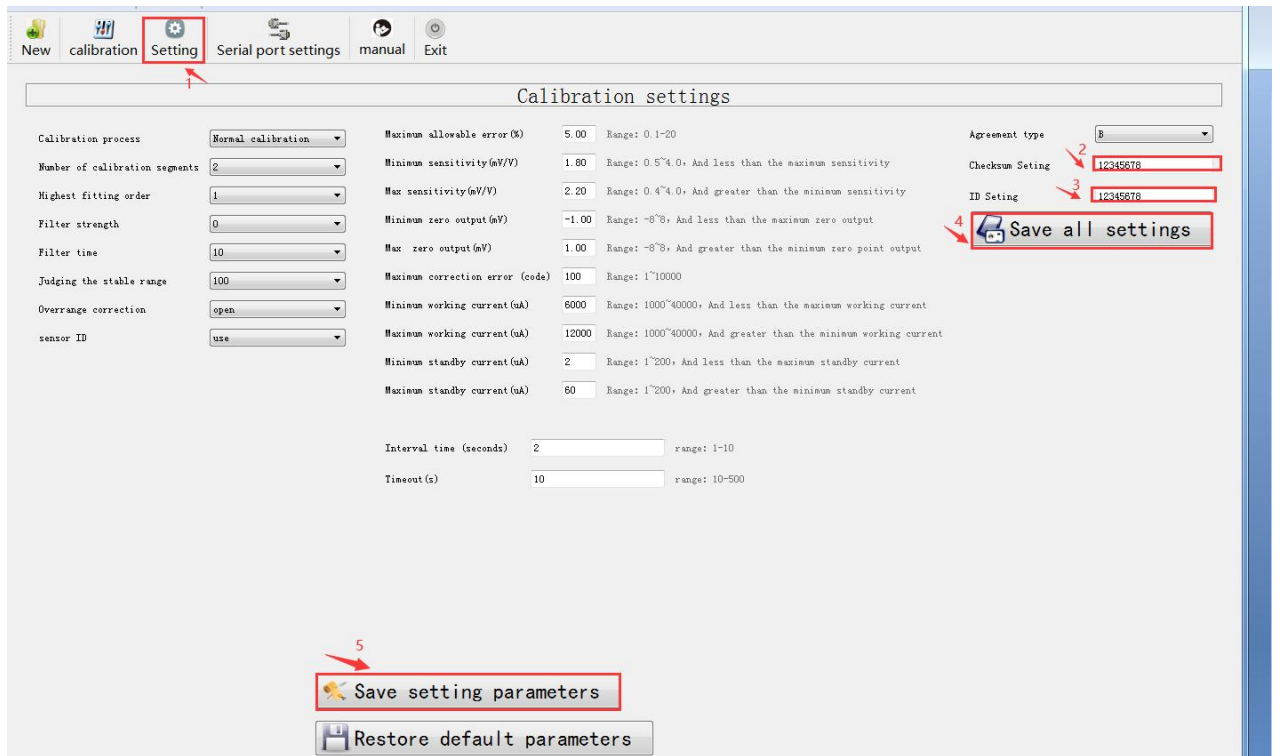

5. Calibration

